



Disassembling Olympus Stylus Tough 6020

Prerequisite Guide

This guide is a prerequisite guide to the initial disassembly of the Olympus Stylus Tough 6020.

Written By: Taylor Carabin



INTRODUCTION


This prerequisite guide provides instructions that need to be performed before beginning replacements on your Olympus Stylus Tough 6020.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

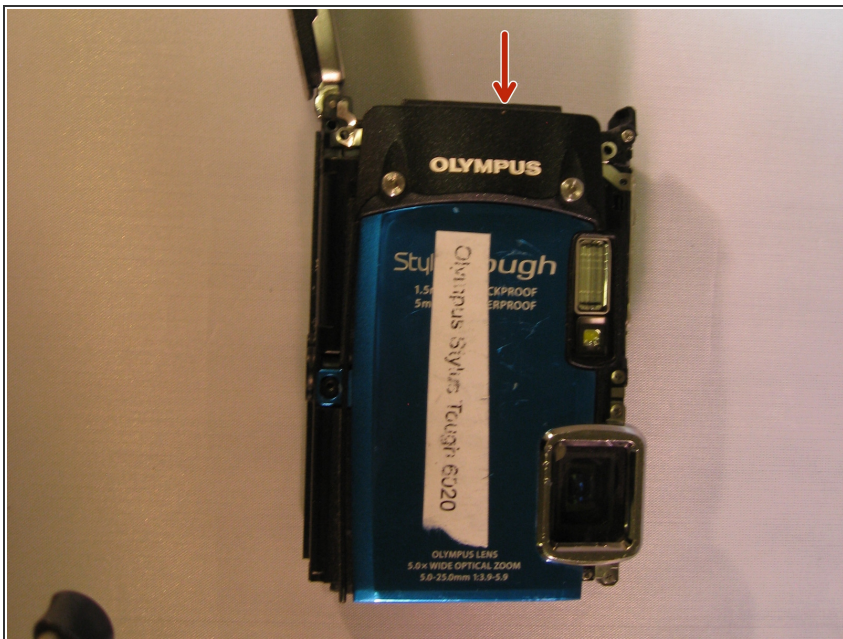


- Slide and push the battery casing to open it.
- Push the battery to eject it.

Step 2 — Bottom Plating

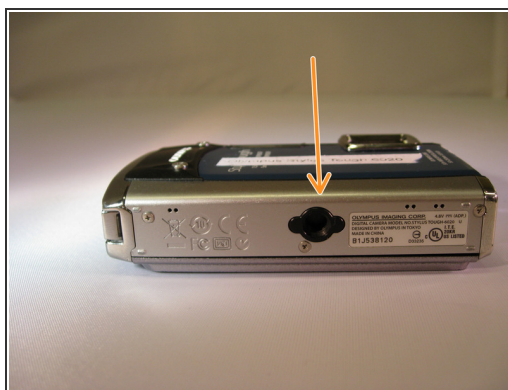


- Turn the camera so that you are facing the bottom of the camera.
- Using a Phillips 00 screwdriver, unscrew the three 3.9mm screws on the bottom of the camera.
- Using a spudger, pry off the plating on the bottom of the camera.

Step 3 — Top Plating

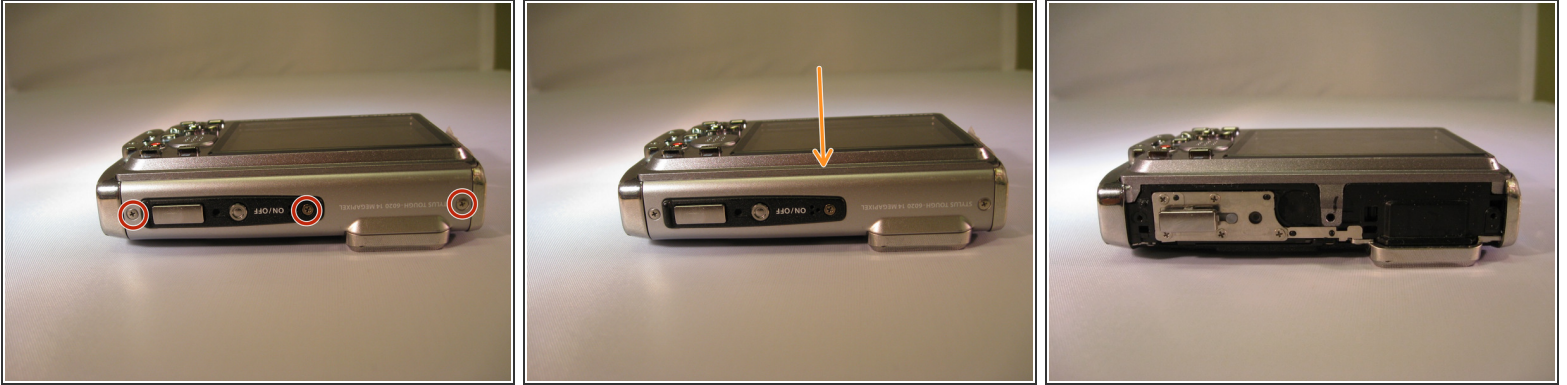



- Turn the camera so that you are facing the top of the camera.
- Using a Phillips 00 screwdriver, unscrew the three 3.9mm screws located on the top of the camera.
- Using a spudger, pry off the plating on the top of the camera.

Step 4 — Left Plating

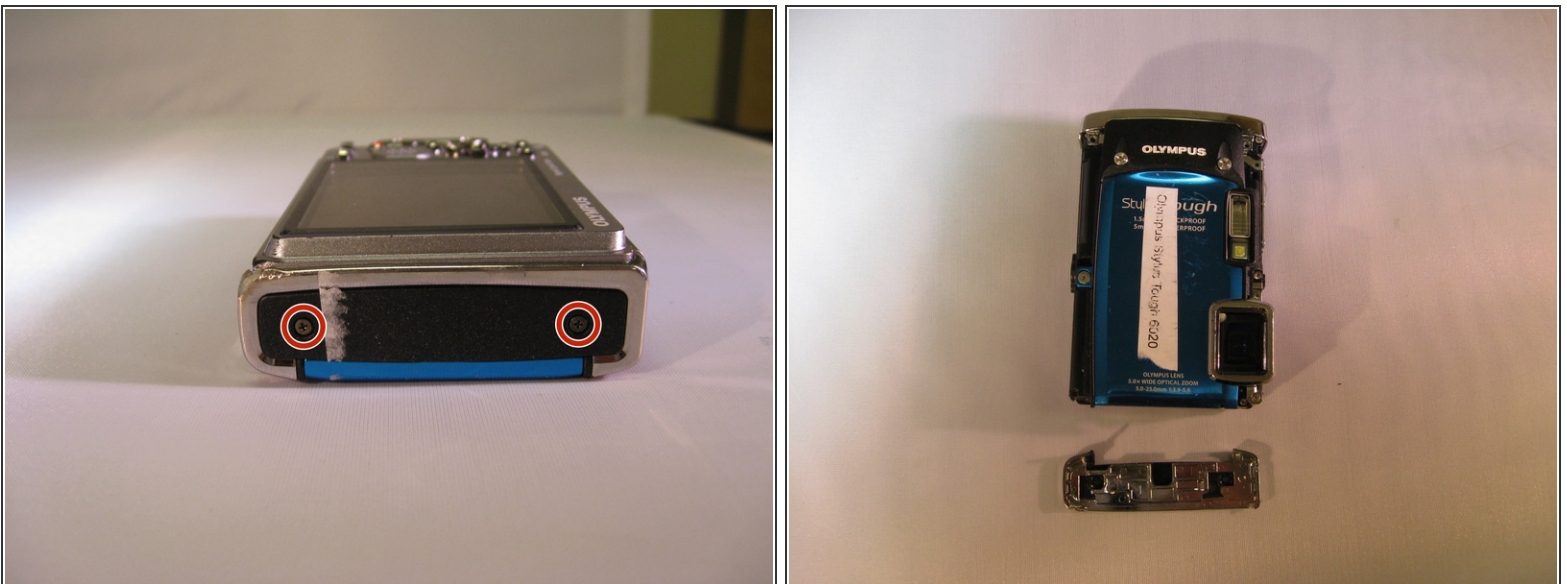


- Turn the camera so the LCD is facing upwards.
- Using a Phillips 00 screwdriver, unscrew the two 3.9mm screws located on the left side of the device.

Step 5 — Black "Olympus" Face Plate

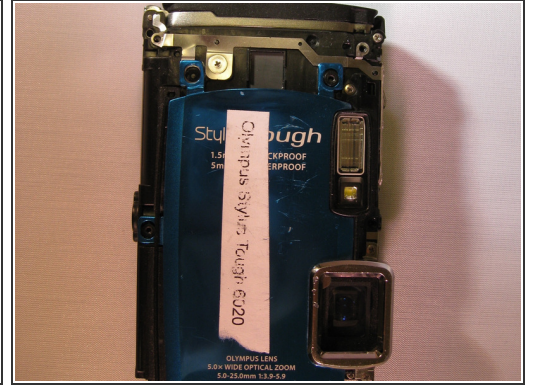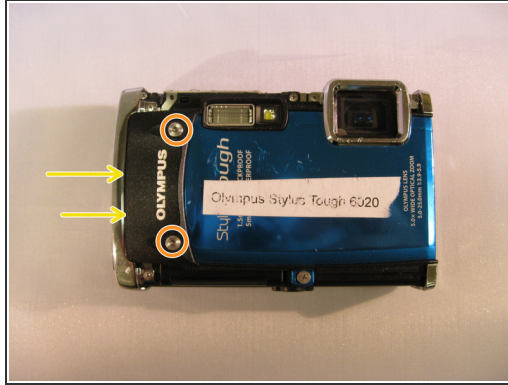


- Using a Phillips 00 screwdriver, unscrew the 3.9mm screw located next to the black "Olympus" face plate.
- Using a T6 Torx screwdriver, unscrew the two 3.5mm screws located on the black "Olympus" face plate.
- Using a spudger, gently pry off the black "Olympus" face plate.

Step 6 — End Casing

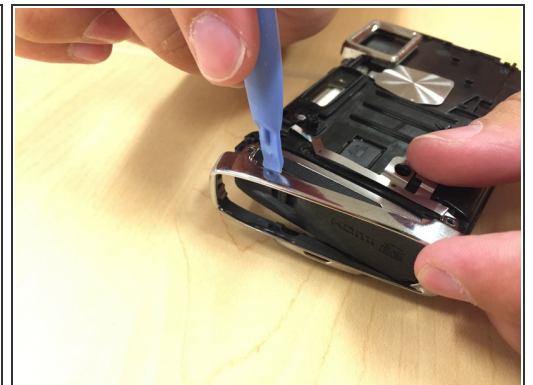

- Using a Phillips 00 screwdriver, unscrew the two 3.9mm screws to the right of the cursor pad on the U-shaped frame.
- Turn the device over so the front of the camera is facing you.
- Using a Phillips 00 screwdriver, unscrew the two 3.9mm screws on the end casing.
- Using a spudger, pry off the end casing.

Step 7 — Blue Face Plate

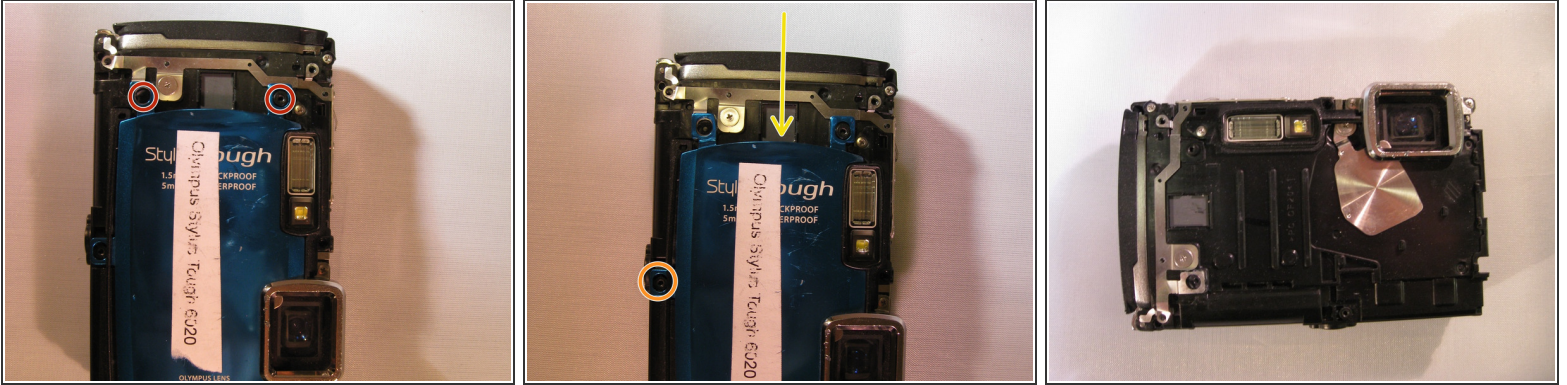

- Turn the camera so the blue face plate is visible.
- Using a Phillips 00 screwdriver, unscrew the two 3mm screws on the blue plate.
- Using a Phillips 00 screwdriver, unscrew the 3.9mm screw located at the bottom of the camera straight down from the flash.
- Using a spudger, gently pry off the blue face plate.

Step 8 — Back Plate



- Using a Phillips 00 screwdriver, unscrew the 9mm screws on the top of the camera to the right of the flash.

Step 9



- Using a Phillips 00 screwdriver, unscrew the wide 3.5mm screw located in the middle of the camera.
- Using a Phillips 00 screwdriver, unscrew the 9mm screw located at the top left corner of the camera.
- Using a spudger, separate the black plate from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 11:43:45 AM.